Lenco

Xemio-654/664
User's Manual

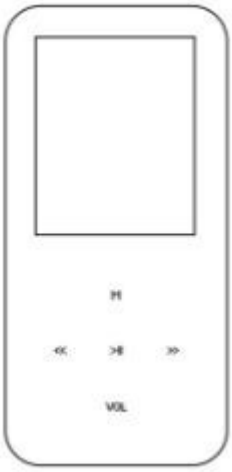

For information and support, www.lenco.eu

What's in the box?

Operating Unit

User Manual

USB Cable

Earphone

Installation CD

Content

Buttons location and usages

Basic Operation

Power on and off

Operation of Music Mode

Repeat Mode

Volume Control

Vedio Mode

Driver and Software Utilities Installation

Converting different video format to .AMV video

Record

Photo

Auto-off time Mode

Technical Specification

Trouble Shooting

Buttons location and usages

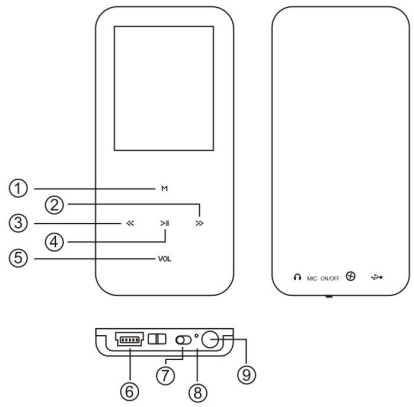

(1) Mode / function
(2) Next/Forward Function
(3) Previous / Backward function
(4) Play/Pause
(5) Volume button
(6) USB port
(7) On/off
(8) Mic
(9) Earphone jack

Basic Operation

Power on and off

Switch the On/Off button first and Press >|| for 3 seconds to turn on the player.
Hold >|| for 3 seconds to power off the player

Operation of Music Mode

After entering the main menu page, select the Music and press M to enter playing song mode.In Music Mode, press >|| once to play music. Press >|| again to pause. Press >> to jump to the next song, and << to jump back to the previous song. Hold >> to fast forward and hold << to rewind.
Hold M to return to the main menu

Repeat Mode

In playmode, you can Press M to enter the sub-menu and select the Repeat mode from **Normal/Repeat one/Folder/Repeat Folder/Repeat All/Random or intro** and press M to confirm

Volume Control

While enjoying your music you can press button VOL to control the volume. Press << to volume down the music and Press >> to volume up the music

Operation of Movie Mode

After entering the Main Menu, select “Movie” and press M to enter Movie mode.
Note: Only files of the .AMV format will be played in Movie mode.
Press ≪ / ≫ button to select your desired movie.
Press the M button to start playing the selected .AMV movie. If there are no .AMV files, “Empty Disk” will be shown on the display.

Skip Movies

Press ≪ / ≫ button to jump to the next or previous movie.

Fast Forward and Backward

Look for a certain passage in a movie file by pressing and holding ≪ / ≫ while a movie is playing.

Driver and Software Utilities Installation

If you are using Windows® 98/98SE, you must install the driver before downloading any files to your player.
Note: If you are using Windows® Me/2000/XP, you may skip the following installation procedures.

Step 1. Double click on **Setup.exe** to start the driver installation. Follow the onscreen-menu to complete the installation.
Step 2: After installation is completed, please restart your computer.

Converting different video format to .AMV video

Step 1: After installing the driver and software utilities, click Start button, select All Programs > MP3 Player Utilities 4.25 > AMV Convert Tool

Step 2: Click on the Input File button to select the .ASF video file you want to convert to an .AMV video file.. Also click on the Output File button to select the destination path for the AMV video file.
Step 3: Click Convert button to start converting process. You will see .AMV video file was converted.

Note : The software can convert .DAT, .WMV, .AVI video format into .AMV video also.But if the resolution for the your desired files less than 160x120,you may not convert it correctly.

Record

In the main menu page, Press ≪ / ≫ to selet the Record mode and Press M to enter the recording voice mode

Press ≫|| to start recording and Press ≫|| again to stop or continute recording
Press ≫|| mode till “Saving…..” appear on the display to save the recorded voice when you finished the recording.

Photo

After entering the Main Menu, select Photo and press M button to enter the Photo Browse function.
Press the ≪ / ≫ button to select your desired photo.
Note: Only files of the .JPG, .BMP and GIF format will be displayed in the View PHOTO function.

Setup

After entering the main menu page and Press ≪ / ≫ to select Setup and press M to enter the setup page

Language Setting

After entering the setting page, press ≫ then M to enter the language option. Press ≪ / ≫ to choose your preferred language and press M to confirm

Auto-off Time

In the setup Mode, press M to enter the power-off setting, then press ≪ / ≫ to select which minutes you want the player to automatically shut down and Press M again to confirm the setting, and hold M to return to previous menu.

Technical Specification

Flash Memory XEMIO-654 Flash Memory XEMIO-664	4GB 8GB
MP3 compressed rate supported	MP3(8 – 320 kbps) WMA(5-384kbps)
Video format supported	AMV
Photo format supported	JPEG / BMP / GIF
Battery	Li-Polymer battery
Interface	USB2.0 full speed
Display	1.8” Color TFT Display
Frequency Response	20Hz – 22KHz
Distortion	<0.5%
Rate of Signal-to-noise	>85dB
Earphones Output Power	10mW
Weight	30g
Dimensions	40(W) * 7.5(D) * 82(H) mm

Trouble Shooting

What should I do if there's no sound when playing?

You should check the volume first. If the volume has been turned up, maybe the memory format of the device is incorrect..

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)